


One IP Desk or Wall Mounted Master Station and a turbine Substation

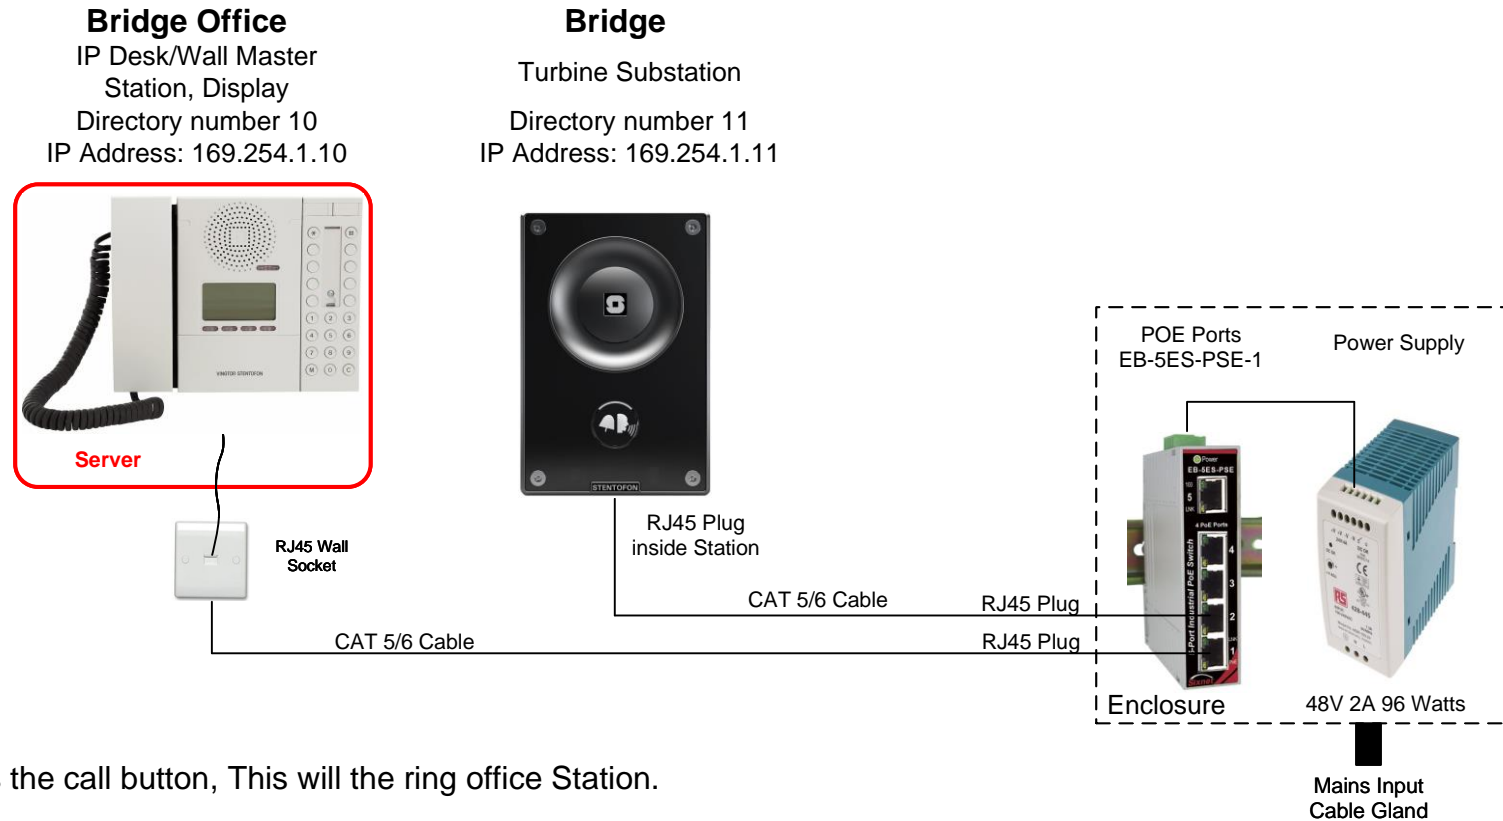

Operation

From Bridge Station press the call button, This will the ring office Station.


In the office press the “M” key or pick up the handset to answer call.

From the office dial “11” or press the “*” DAK (Direct Access Key) to call the bridge station.

If there is large amount of noise at the bridge station you might need to press and hold the “M” key on the desk station to force the conversation to the bridge, release to Listen to bridge.

To cancel call press “C”


Pulse Intercom System - Wiring

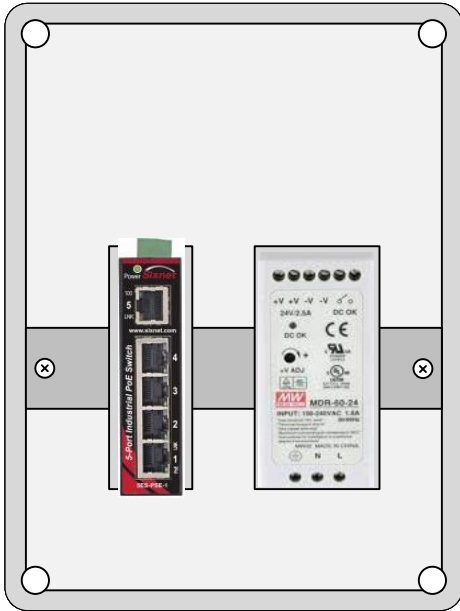


Important

Use Cable Gland to secure mains cable

Ethernet PoE Switch

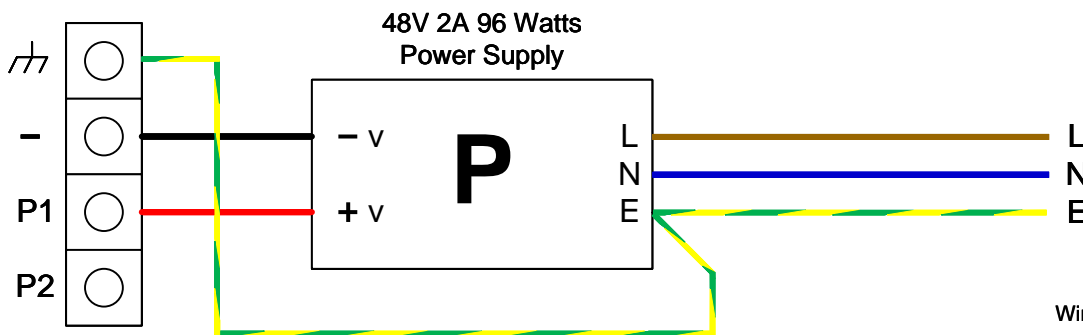

Wiring for RJ45 Plug (T568B)

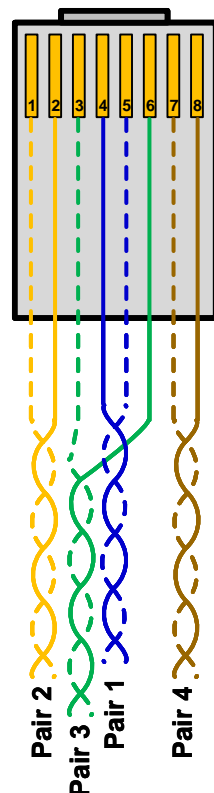

Wiring for RJ45 Wall Sockets and Plugs (T568B)

See Application Specification Sheet for wiring of
 Wall Sockets
 T568B

NOTE

It is important that when wiring RJ45 plugs that you keep to Standard wiring. The recommended Standard for Stentofon Intercoms is T568B. The Cable should be Cat 6 Copper with good quality RJ45 plugs. It is important that the pairs are used correctly.