


Pulse Mortuary Room Intercom

Viewing Gallery


Directory number 11
IP Address: 169.254.1.101

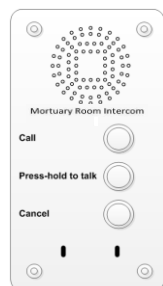

Call
Press-hold to talk
Cancel

System Control Box


Directory number 10
IP Address: 169.254.1.99

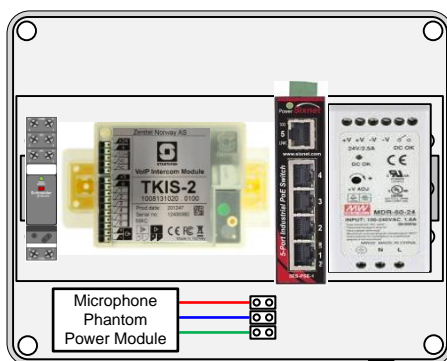

Mains Input
Cable Gland

Important
Use Cable Gland to
secure mains cable

Table

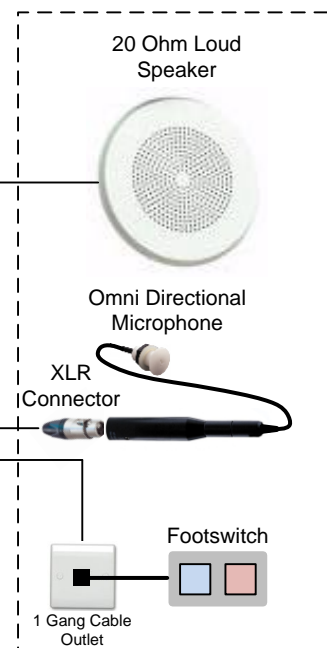

Cat5/6

Installation

- Control Panel should be mounted in the viewing gallery with easy access to controls. Flush mounted.
- The System control box can be mounted in the mortuary or viewing gallery, access is only needed for technical adjustment. Power is required for the control box. we recommend 13amp fused outlet.
- Cable between control panel and is CAT 5 cable
- Cable for microphone should be microphone cable, 2 core plus Screen.
- The speaker requires 2 core speaker cable.
- Cable between footswitch and 1 gang cable outlets can be CAT 5.

Recommendations

- Microphone must be fitted where it can pickup speech and not equipment noise. Beware of air conditioning units.
- Loudspeaker must be fitted more than 1 metre away from microphone.
- 1 gang cable outlets should be fitted to wall near tables for footswitches (Lead on foot switch 2 metre), with cables back to System control box.

Operation

- The Pathologist Uses the left pedal on footswitch to open communications to viewing gallery, and can use the right pedal on footswitch to cancel communications.
- People in the Viewing Gallery can communicate with the pathologist by pressing the call button, then press and hold the "Talk" Button to talk, let go of the Talk Button to return to listen mode.
- Pathologist cannot hear viewing gallery without the middle button being pressed.

Close System

- To end all communications (Switch OFF) press the Cancel Button or cancel on footswitch.

System Control Box Wiring

