


De-Escalation Room Intercom with Music Option

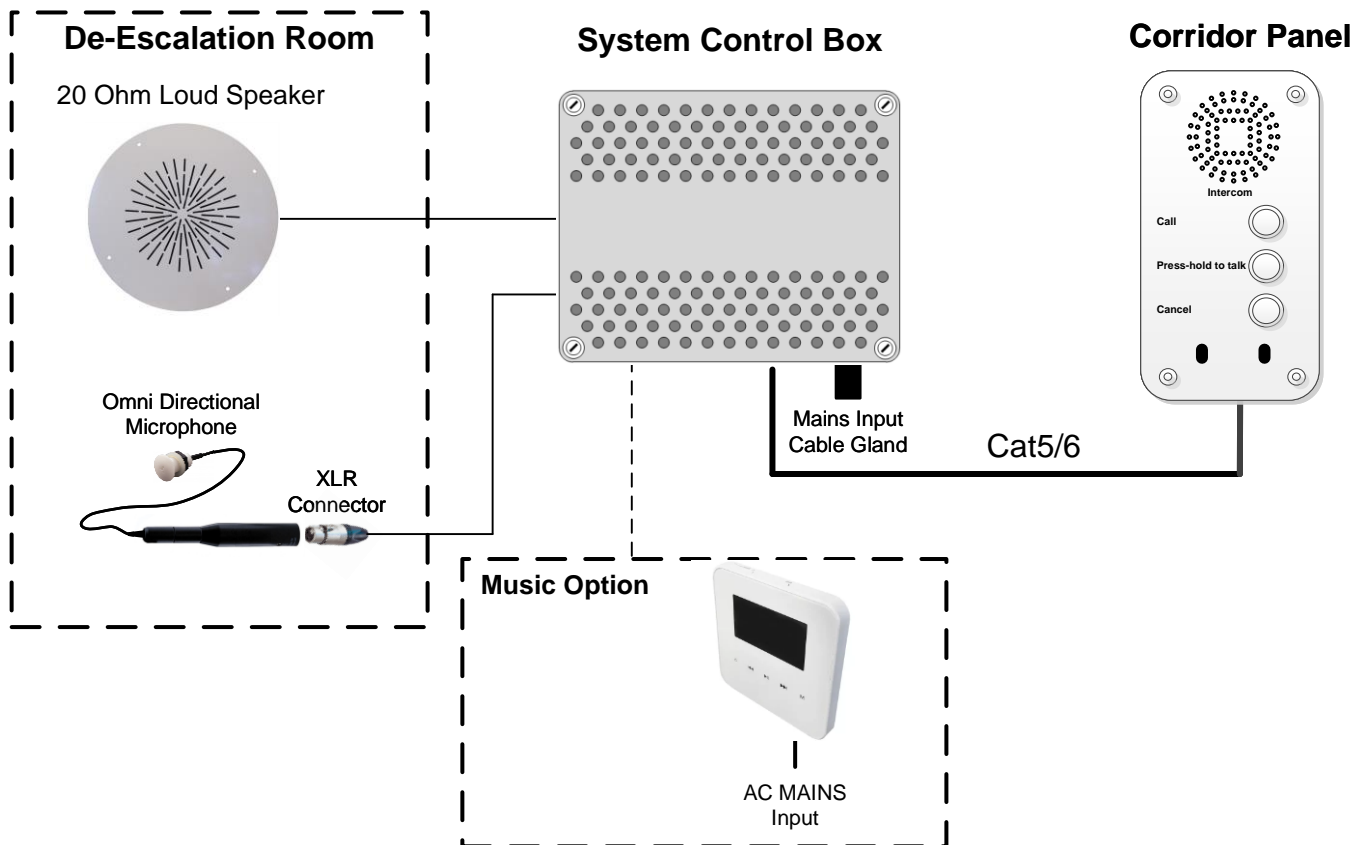

Installation

Corridor panel should be mounted with easy access to controls.
 System Control Box can be mounted in the corridor ceiling, but may require access.
 Cable between Control Panel and System Control Box is CAT5E/6 cable.
 Cable for microphones should be microphone cable, 2 core plus Screen.
 The speakers requires 2 core speaker cable, use same type cable between Music Interface if fitted.

Operation

To communicate with the De-Escalation room, press the call button, then press and hold the middle button to talk to the patient, let go of the middle button to return to listen mode.

Patient cannot hear operator without the middle button being pressed.
 When Pressing the middle button, relay will cut music from music interface (if fitted).

Close System

To cancel all communications (Switch OFF) press Cancel.
 Music will still be heard from Music Interface to speaker.
 Press ON/OFF button on Music Interface to turn OFF, then switch off music source.