


Pulse Isolation Room Intercom with Music Option


Corridor Panel

Directory number 11
IP Address: 169.254.1.11

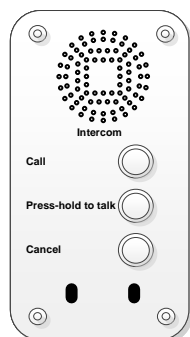

System Control Box

Directory number 10
IP Address: 169.254.1.10

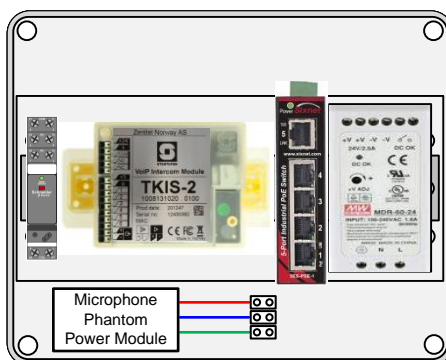


Cat5/6

Mains Input
Cable Gland

Isolation Room

20 Ohm Loud Speaker

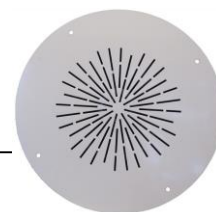

Omni Directional
Microphone



Music Option

Avid set to Mono

Note remote balance control
will affect the music volume
depending on which channel
output is used.
Bluetooth is on input S2



AC MAINS
Input

Important

Use Cable Gland to
secure mains cable

Installation

Corridor panel should be mounted with easy access to controls.
System Control Box can be mounted in the corridor ceiling, but may require access.
Cable between Control Panel and System Control Box is CAT5 cable.
Cable for microphone should be microphone cable, 2 core plus Screen.
The speaker requires 2 core speaker cable, use same type cable between Avid if fitted.
See Avid installation guide.

Recommendations

Microphone must be fitted where it can pickup speech and not equipment noise.
Loudspeaker and Microphone must be spaced so that there is no Feedback, More than one metre apart.

Operation

To communicate with the Isolation room, press the call button, then press and hold the middle button to talk to the patient, let go of the middle button to return to listen mode.

Patient cannot hear operator without the middle button being pressed.
When Pressing the middle button, relay will cut music from Avid (if fitted).

Avid settings

Bluetooth setup codes are under face plate, Bluetooth input is on input S2
See Avid Manual for operational instructions.

Close System

To cancel all communications (Switch OFF) press Cancel.
Music will still be heard from Avid to speaker.
Press ON/OFF button on Avid to turn OFF, then switch off music source.

System Control Box Wiring

